

LESSON 29 AN/FCC-100(V)7 & 9X LOCAL AGGREGATE LOOPBACK ACTIVATION

STEP	OPERATOR ACTION	MESSAGE DISPLAYED	SELECT
1	Press the RESTART key.	OPERATOR ALARM	
2	Press the NEXT ENTRY P key.	ACTIVATE	
3	Press the NEXT ENTRY P key.	EXAMINE	
4	Press the NEXT ENTRY P key.	CONFIGURE	
5	Press the NEXT ENTRY P key. (Select LOOPBACK using the DOWN B arrow key).	LOOPBACK	LOOPBACK
6	Select AGGR using the DOWN B arrow key. If selection displayed is not LOC-INT-LOOP , then scroll through the options by pressing the NEXT ENTRY P key until LOC-INT-LOOP is displayed. (Select LOC-INT-LOOP using the DOWN B arrow key).	AGGR NO-LOOPBACK LOC-INT-LOOP REM-EXT-LOOP LOC-EXT-LOOP	AGGR LOC-INT-LOOP
7	Press the STORE key, notice that CAUTION is flashing. (Select CAUTION using the DOWN B arrow key. Notice that LOOPBACK is now flashing.	CAUTION LOOPBACK	CAUTION
8	Press the STORE key to ACTIVATE this AGGREGATE LOC-INT-LOOPBACK . LOCAL AGGREGATE LOOPBACK becomes ACTIVE when the (LOC AGGR LOOP) LED is "ON".	AGGR LOC-INT-LOOP	
9	Press the RESTART key.	OPERATION NORMAL	

PLEASE NOTE: THAT TO PROPERLY PERFORM THIS LOCAL AGGREGATE LOOPBACK THE FOLLOWING TIMING OPTIONS MUST BE SELECTED: TRACKREF TO INTERNAL AND TRXCKSRC TO TRK.

**END OF THE FCC-100(V)7 & 9X ACTIVATION OF THE
LOCAL AGGREGATE LOOPBACK**